


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0172 / P0174 / P0176 / P0178

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THIS INSTRUCTION.

Hardware Package (included):

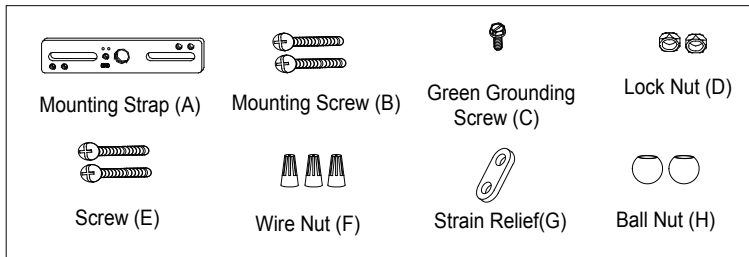

Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew two ball nuts, remove mounting strap from canopy.
2. Loosen the plastic headless screw on the canopy using a flathead screwdriver (not included), .
3. Thread the cord through the canopy and Strain Relief. Measure the desired length of the cord (A) from the canopy to the glass shade and Leave additional 9" cord (B) above the canopy(include the canopy), and then cut off the unnecessary cord.(See Fig.1)
4. Adjust strain relief at 9" position from the top of the cord.
5. Mark the 3" cord (C) from the top of the cord (B). Use a knife to peel off the insulation of the cord (C) carefully to show the 3 inside wires out. (See Fig. 1)
Caution : Cutting too deep may cut off three inside wires and destroy the insulation surface of the three inside wires.
6. Peel off the 3 wires from the top about 3/8" long(D) to expose the copper for wiring.
7. Attach the mounting strap to outlet box by using two mounting screws.
8. Carefully inspect the fixture wires, the NEUTRAL wire (with a white line along its length), the HOT wire (clear), the GROUND wire (with a green line along its length) before making wire connections.
9. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - a. The hot wire marked "L" from the fixture to the black wire from the power source.
 - b. The neutral wire marked "N" from the fixture to the white wire from the power source.
 - c. The green grounding wire marked "⊕" from the fixture to the green grounding wire from power source.
 Carefully put wires back into the outlet box.


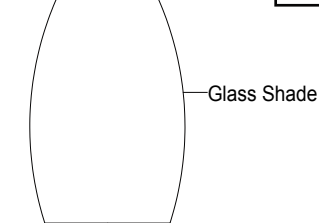
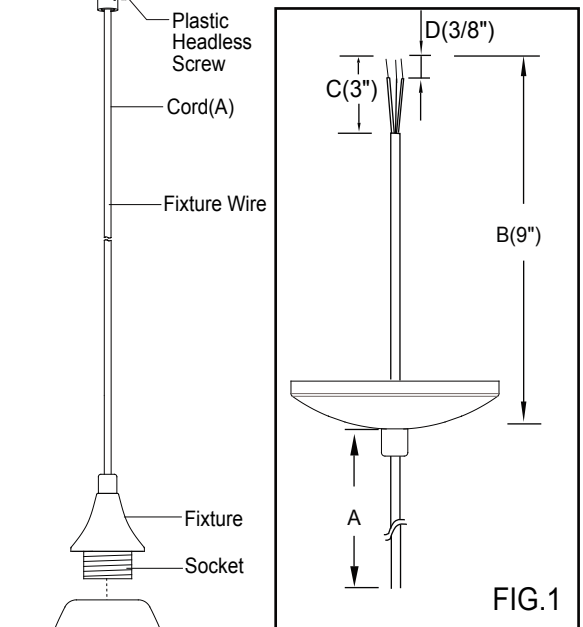

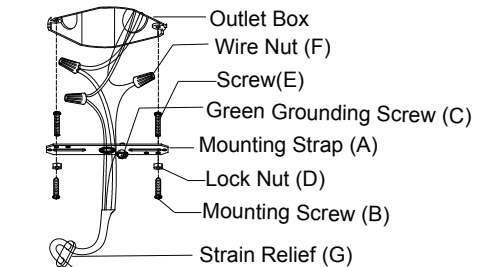


FIG.1


10. Pull the cord (A) down slightly until the strain relief touches the hex nut. Attach the canopy to the mounting strap by inserting two screws, and then secure it with two ball nuts.
11. Fastening cord by screwing plastic headless screw, using flat head screwdriver (not included).
12. Attach the glass shade to fixture, and then secure it with the socket ring.
13. Install bulb(not included). Check relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at fuse or circuit box.


The following parts are available for re-order if damaged or missing.

Spare Parts List:

Mounting Strap (A)	Mounting Screw (B)	Green Grounding Screw (C)	Lock Nut (D)	→ Assembly Kit 5509MM (1 SET)
Screw (E)	Wire Nut (F)	Strain Relief (G)	Ball Nut (H)	

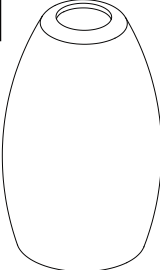

Glass Shade
 9754AG (1PC) FOR P0172
 9755AG (1PC) FOR P0174
 9756AG (1PC) FOR P0176
 9757AG (1PC) FOR P0178

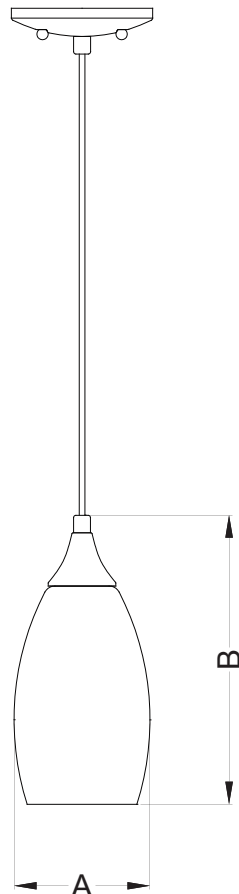

A: 4-3/4"

B: 9-3/4"